INSTALLATION AND REPAIR GUIDE

Split Wall-Mounted Air Conditioner

DC Inverter Single Series

A-GYG01Eng

Foreword

Air conditioners are units that should have the professional technicians do the installation for you.Installation must be performed in accordance with the requirements of NEC and CEC by authorized personnel only.

This Instruction Guide is the universal-purpose version for the models of split wall-mounted air conditioners manufactured by our Co. The appearance of the units that you purchase might be slightly different from the ones described in the Guide, but it does not affect your proper operations and usage.

Please read carefully the sections corresponding to the specific model you choose, and keep the Guide properly so as to facilitate your reference at later time.

CONTENTS

Selection of installation positions for indoor unit	1
Selection of installation positions for outdoor unit	2
Installation fixture of indoor unit	3
Installation fixture of outdoor unit	4
Ordinary pipelines connection & Air purging	4
Installation of electric components	5
Pipelines connection for Split type quick coupler model	7
Pipelines connection for Whole-Unit type quick coupler model	8
Connection of power cable	9
Finishing touches and test running	9
Is the unit installed correctly?	10
Self diagnosis functions	11
Quick connector installation instruction	14
Installation Guide	15

【Selection of installation positions for indoor unit】

- To be installed at the position where the air delivered from the unit can reach every corner of the room;
- To avoid being affected by the outdoor air;
- To avoid blockage to the air inlet or outlet of the unit;
- To avoid too much oil smoke or steam;
- To avoid possible generation, inflow, lingering or leakage of flammable gases;
- To avoid high-frequency facilities (such as high frequency arc welders, etc.);
- To avoid the places where acid solutions are frequently used;
- To avoid the places where some special sprayers (sulfides) are frequently used.
- Not to install on top of the musical instruments,TV,computer etc.valuable appliance.
- Not to install a fire alarming device near the air outlet of the unit (during operation, the fire alarm device might be erroneously triggered by the warm air from the unit);

■ Make sure of enough space for installation and maintenance.

- To take into consideration the operational convenience and safety in installation, it is recommended to ensure enough space between the unit and the walls.

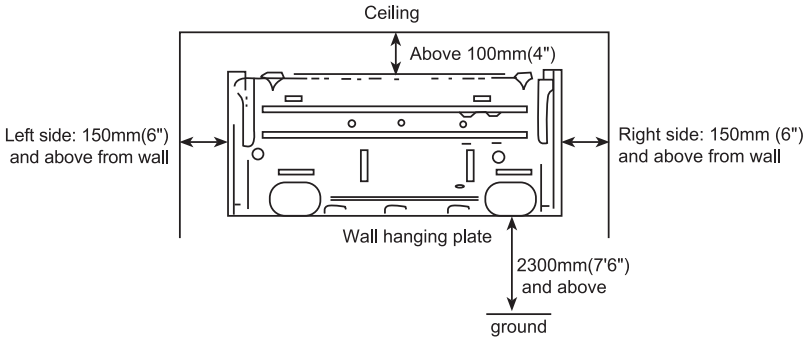

Attention:If there are some additional function devices to install on the air conditioner,Be sure add to the installation space for the function devices.

■ Height limits of indoor and outdoor units.

- Either the indoor unit or the outdoor unit can be higher, but the height difference must comply the stated requirements.
- Try to reduce the bending of the piping line as much as possible so as to avoid possible negative impacts upon the performances of the units.

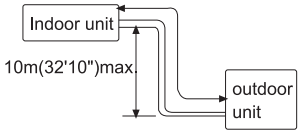

【Selection of installation positions for outdoor unit】

- To install the outdoor unit at the places which can stand the load of the machine weight and will not cause big vibrations and noises;
- To install the unit at the places not to be exposed to rain or direct sunshine, and the places with good ventilation;
- The noises generated from the unit will not affect the neighboring places;
- Do not install the unit on non-metal frame;
- Not to install the unit at the places where there might occur the generation, inflow, stay or leakage of inflammable gases;
- Pay attention to the drainage of the condensed water from the base plate during operations;
- To avoid the air outlet being directly against the wind.

Detailed space requirements around the outdoor unit

1. When there are obstacles above the unit

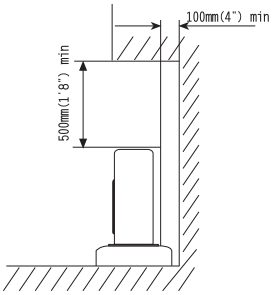

2. When the front (air outlet) is open

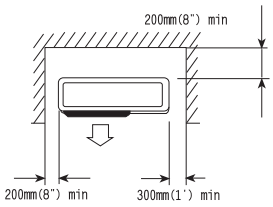

3. When there are obstacles only in the front (air outlet)

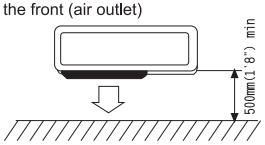

Space for maintenance
Shown as in the following figure. Keep the maintenance space in front of the unit.

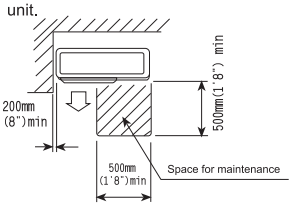

4. When there are obstacles at the front and rear sides.

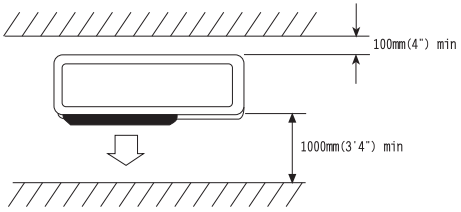

5. When there are obstacles all around the unit on four sides.
Although the top side is open, the installation is not to be done if there are obstacles all around.

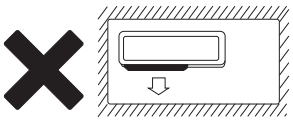

- At least two sides should be kept open.

【Installation fixture of indoor unit】

Pipelines can be connected in the directions of①、②、③、④、and⑤ as indicated in Fig.1. When the pipelines are connected to the directions of③、④and⑤, a groove for the pipes has to be opened at the proper place on the base stand.

Fig.1

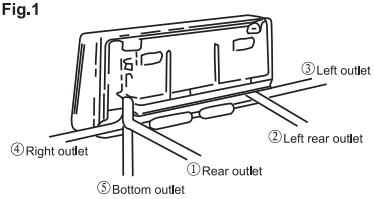

1.Installation of wall-mounting plate

Fix the wall-mounting plate firmly on the wall with screws. Make sure of the leveling of the plate. Slanted wall-mounting plate might jeopardize the smooth discharge of the condensed water.

2.Drill holes on the wall

Drill holes at places slightly below the wall-mounting plate, with hole diameter of 65mm(2-3/5") and the outer edge of the hole 5-10mm(1/5-2/5") lower (Fig.2) so that the condensed water can smoothly flow out. Cut the wall penetrating pipe to proper length according to the thickness of the wall (3-5mm(1/10-1/5") longer than the wall thickness) and insert the pipe as indicated in Fig.2.

Fig.2

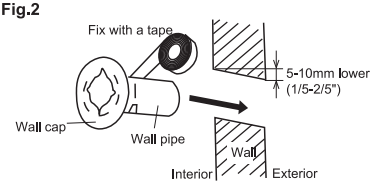

3.Installation of drain pipe

Install the pipelines of the indoor unit in accordance with the direction of the wall holes. Wrap tightly the drain pipe and the pipelines with tape. Make sure that the drain pipe is underneath the pipelines. (Fig.3) (When the drain pipe passes the room interior, some condensed water might occur to its surfaces if the humidity is very high).

Fig.3

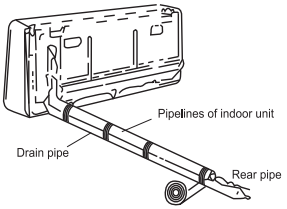

4.Installation of indoor unit

Pass the connection wires, connecting pipelines and drain pipe through the wall hole. Hang the indoor unit on the hooks at the top of the wall-mounting plate so that the hooks at the bottom of the indoor unit match the hooks of the wall-mounting plate. (Fig.4)

Fig.4

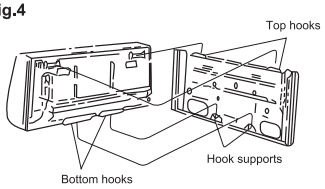

Inspections:

a. Check if the hooks at the top and bottom are firmly fixed.
b. Check if the position of the master unit is properly leveled.
c. The drain pipe should not curve upward (Fig.5).
d. The drain pipe should be at the lower part of the wall pipes (Fig. 5).

Fig.5

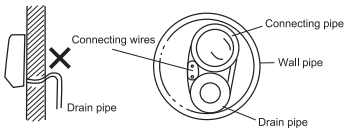

【(indoor unit)the figure of outline and installation dimension】

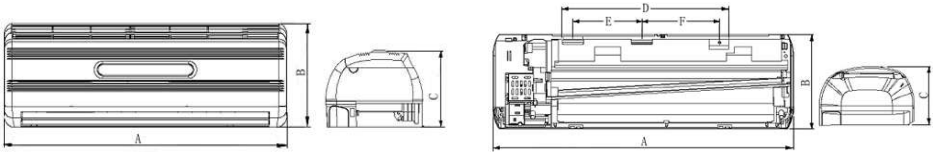

【Installation fixture of outdoor unit】

- Try to ship the product to the installation location in its original package;
- As the gravity center of the unit is not at the installation center, special caution should be taken when using hoisting cables to lift it up;
- During shipping, the outdoor unit must not be slanted to over 45 degrees (Do not store the unit in a horizontal way).
- Use expansion bolts to fix the mounting supports on the wall;
- Use bolts and nuts to fix the outdoor unit firmly on the supports and keep on the same level;
- If the unit is installed on the wall or at the rooftop, the supports have to be firmly fixed so as to resist earthquake or strong wind.

Dimensions for parallel units installations

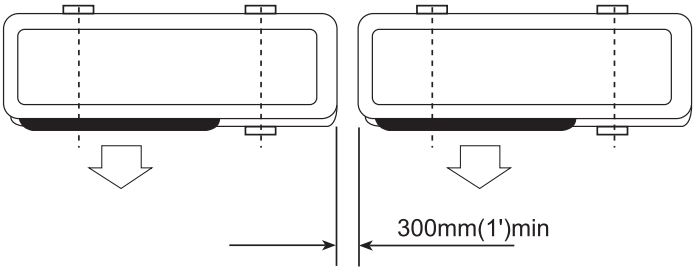

【Ordinary pipelines connection & Air purging 】

- **The following ordinary pipelines connection and air purging procedures are just suitable for non-quick coupler model.**

■Ordinary pipelines connection

No dust ,foreign articles,air or moisture should be allowed to enter the air conditioning system.Careful attention should be paid when pipeline connection for outdoor unit is made.Try to avoid repeated curves as much as possible,otherwise hardening or cracks might be caused to the copper pipes. Suitable wrenches should be used when the pipeline connection is done so as to ensure appropriate torque(refer to following torque Table 1).Excessive torque might damage the joints while too little torque might lead to leakage.

Table 1 Torque based upon the wrench to be used

Outer diameter of copper pipe	Tightening torque	Strengthened tightening torque
∅ 6.35(1/4")	160kgf.cm(63kgf.inch)	200kgf.cm(79kgf.inch)
∅ 9.52(3/8")	300kgf.cm(118kgf.inch)	350kgf.cm(138kgf.inch)
∅ 12.7(1/2")	500kgf.cm(197kgf.inch)	550kgf.cm(216kgf.inch)
∅ 15.88(5/8")	750kgf.cm(295kgf.inch)	800kgf.cm(315kgf.inch)
∅ 19.05(3/4")	1200kgf.cm(472kgf.inch)	1400kgf.cm(551kgf.inch)

■Air purging with vacuum pump

1.Check that pipelines connection have been properly connected,remove the charging port cap,and connect the manifold gauge and the vacuum pump to the charging valve by service hoses as shown Fig.6.
2.Open the valve of the low pressure side of manifold gauge,then,run the vacuum pump.Vacuum the indoor unit and the connecting pipes until the pressure in them lowers to below 1.5mmHG(The operation time for vacuuming is about 10 minutes).When the desired vacuum is reached,close the valve of the low pressure of the manifold and stop the vacuum pump.

3.Disconnect the service hoses and fit the cap to the charging valve.
4.Remove the blank caps,and fully open the spindles of the 2-way and 3-ways valves with a service valve wrench.
5.Tighten the blank caps of the 2-way and 3-ways valves, applying the above torque Table 1.

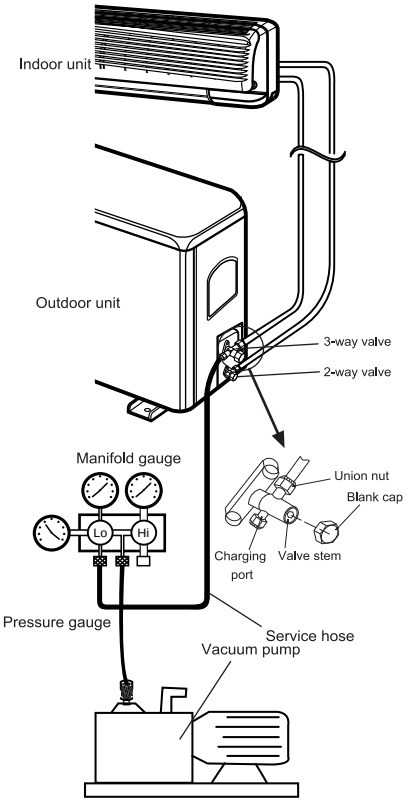

Fig.6

■Gas leakage inspection

After the pipieline connection is done,use a leakage inspection device or soap suds to carefully check if there is any leakage at the joints.This is an imporant step to ensure the quality of installation.Once a leakage is detected,proper treatment should be taken immediately.

【Installation of electric components】

■ Points of attention

- HACR type breaker should be utilized along with proper installation;
- Make sure of the applicable voltage and cables or wires for the specific model to be used, before doing the connections;
- Read the prompts at the terminal board for wiring. Make sure the wiring is done correctly.
- Pay attention to the poles of the signal terminal and connect the terminals to match the identification numbers.
- When the wiring connections are wrong, the compressor will not work.
- The connecting wires are not supplied.
- The provision for connection of one of the wiring systems that in accordance with the National Electric Code shall be had.ANSI/NFPA 70-1990 would be acceptable for it.

- TAS-09EHU&TAS-09EHU/O,TAS-12EHU&TAS-12EHU/O

The connecting wires specification is 18 AWG,VW-1(orTHHW),copper core and 90°C (or 194°F).

- TAS-18EHU&TAS-18EHU/O,TAS-24EHU&TAS-24EHU/O

The connecting wires specification is 18 AWG,VW-1(orTHHW),copper core and 105°C(or 221°F).

Connection of wires for outdoor unit

The outdoor power supply
The power is 115V~/60HZ model

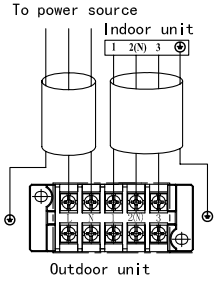

The outdoor power supply
The power is 220-240V~/60HZ model

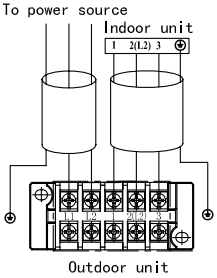

The indoor power supply
The power is 220-240V~/60HZ model

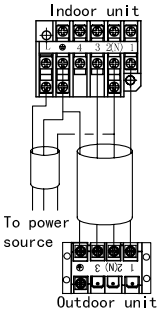

The outdoor power supply
The power is 220-240V~/60HZ model

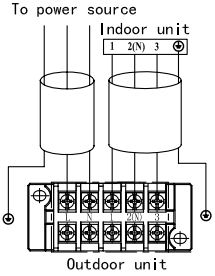

The outdoor power supply
The power is 220-240V~/60HZ model

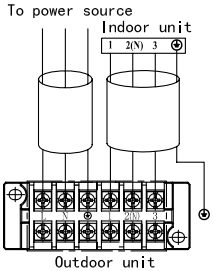

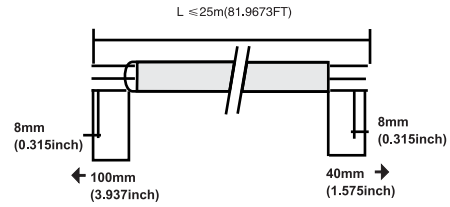

The power wire

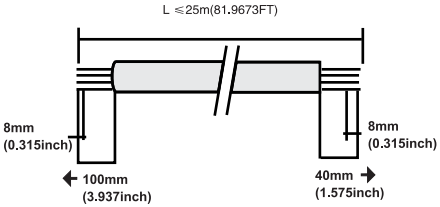

The connecting wire

Note:

- The environment conditions must be taken into consideration when the connections of power cable are made (such as the ambient temperature, direct exposure to heat/direct exposure to sunlight);
- The specifications for the power cable refer to the minimum values of the metal core wires. Taking into consideration the voltage losses, the core wire of power cable must be one size larger than the specifications;
- The grounding wire must be connected to the indoor units and outdoor units;
- The laying of power cables must be done by qualified electricians and comply with the regulations of the local power supply authorities and with the standards of the electric appliances;

【Pipelines connection for Split type quick coupler model】

● If you purchase the machine for split type quick coupler model,please adopt the following pipeplines connection procedures:

1.Remove the dust caps from the indoor and outdoor units, and the connecting pipe.

2.Align the joint counter of connecting pipe with the proper indoor and outdoor joint conic surfaces,tighten the connecting nut manually.Then,make it secure with a wrench as shown Fig.7 ,applying to above torque Table 1.

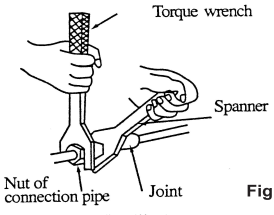

Fig.7

3.Remove the two valve core caps from the outdoor unit.

4.Turn on the high and low pressure valve cores with an socket wrench,then tighten the two valve core caps of the outdoor unit (Fig.8).

5.Finally ,wrap the hot insulating cotton around the joints of indoor and outdoor units.

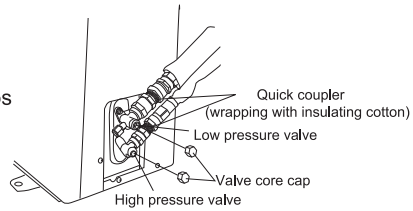

Fig.8

● Notes on installation of quick coupler:

1.Connecting pipe bending minimum radius parameters (Table 3)

2.Quick coupler assembly and disassembly limit: the assembly and disassembly times are inadvisably more than 7.

Table 3 Minimum bending radius

Normial diameter(mm)	Minimum bending radius(mm)	cooling capacity
DN8(5/16")	80(3")	2100~2300W (7000~8000BTU)
DN10-12 (1/2")	100(4")	2500~5100W (9000~18000BTU)
DN14-16 (5/8")	150(6")	6100~7000W (22000~24000BTU)

【Pipelines connection for Whole-Unit type quick coupler model】

● If you purchase the machine for Whole-Unit type quick coupler model,please adopt the following pipeplines connection procedures:

STEP 1

● Remove two screws on the maintance plate with a screwdriver and take off the plate,then remove the dust caps on both indoor male coupler and outdoor female coupler,See Fig.9.

Fig.9

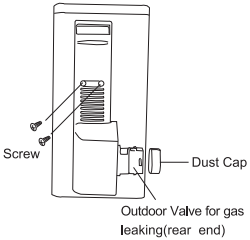

STEP 2

● Press the projecting section of outdoor female coupler backward with a little force by the thumb to make inner hooks open, and then you can easily take out the outdoor valve for gas leaking by the other hand,See Fig.10.

Fig.10

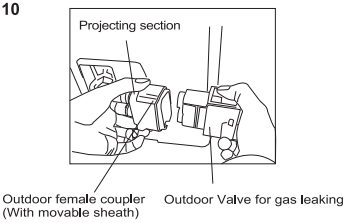

STEP 3

● In the same way,press the projecting section backward,then connect the indoor male coupler to the outdoor female coupler,See Fig.11.

Fig.11

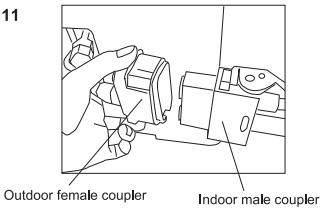

STEP 4

● Close the key lever of indoor male coupler to the horizontal position,then indoor and outdoor refrigerant will be circulating,and now you can obvioulsy hear the sound of inner air flowing ,See Fig.12.

Fig.12

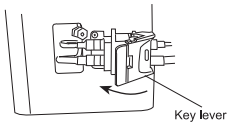

STEP 5

● Connect the outdoor quick cable coupler with indoor quick cable coupler.

STEP 6

● Finally,Re-install the mainteance plate back into its place,See Fig.13.

As for the outdoor valve for gas leaking and the dust caps,you can preserve them for future possible use on the removal of your air conditioner.

Fig.13

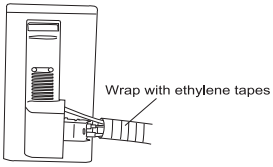

【Connection of power cable】

1.Remove the drawer of the outdoor unit.
2.connect the indoor power and control wires with the matched outdoor wires in accordance
with the electric schematic diagram and make sure that the connection is firmly done(Fig.14.)

Fig.14

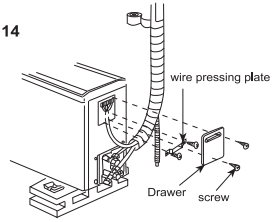

Note:Do not connect the wires in a wrong way,otherwise electric malfunctions will be caused and even damages to the units will occur.The appliance shall be installed in accordance with national wiring regulation.If the supply cord is damaged,it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.The plug shall be accessible after installing the appliance.If the model have not plug that a switch which have a contact separation of at least 3 mm in all poles shalled be added in fixed wiring.

【Finishing touches 】

- wrap the piplines tightly with ethylene tapes.
- Fix the wrapped pipelines on the exterior wall with clamps.
- Fill in the gaps left over by the pipeline hole and wall hole to prevent rain-water from entering.

【Test running】

- Connect to the power source,check if the function selection keys on the remote controller are working properly.
- Check if the room temperature adjustments and timer settings are working properly.

- Check if the drain is smooth.
- Check if there is any abnormal noise or vibration during operation.
- Check if there is leakage of refrigerant.

【Is the unit installed correctly? 】

■Suitable Installation Position

● Isn't there anything which prevents ventilation or obstructs operation in front of the indoor unit ? Do not install the unit following place .

● Inflammable gases may leak .

● Oil splashes a lot .

● In case where the unit is used in such places as poisonous or sultry gases are generated or seaside district exposed to sea breezes corrosion may cause malfunction . Consult with your distributor .

● Air conditioner body and remote controller must be I m(39-3/4") or more away from a TV or a radio. Drain the dehumidified water from the indoor unit to a place which drains well .

■Pay attention to operation noise

● When installing the unit , choose a place which can stand the weight of the unit well and does not increase the operation noise or vibration . Especially where there is a possibility that vibration be transmitted to the house , fix the unit by inserting attached vibration -proof pads between the unit and fittings .

● Choose the place where hot air and operation noise from the outlet of the outdoor unit do not annoy the neighborhood .

● Things left near the outlet and inlet of the outdoor unit cause malfunction or increased operation noise . Do not leave obstacles near the outlet and inlet .

● If irregular sound is heard during operation , consult with your distributor .

■Inspection and Maintenance

● According to the service conditions and operating environment , the inside of the air conditioner will become dirty after several seasons (3 to 5years) of service , resulting in decreased operating performance .Inspection and maintenance are recommended in addition to usual cleaning (The air conditioner can be used for a longer period and without anxiety .)

● As to inspection and maintenance , consult your dealer or any one of business offices of dealing companies .(Service charge is required in this case .)

● We recommend to perform inspection and maintenance during an off seasons.

【Self Diagnosis Functions】

Our company provides the thoughtful services for customer,air conditioners had been installed self diagnosis system to display the information for the units.

The malfunction code	*The malfunction content*	*The reason of fault and solution*
F1	The communication fault	1,the communication wire is broken off,Please check whether the wire is disentwined . 2,Please check whether the electrical control board is damaged.It should be replaced when it is damaged. 3,Please check whether the power ground wire is reliable. 4,Please check whether the unit is abnormal caused by the external interference.If it is, then find the interfering sources, and remove them.
F2	The indoor emperature sensor fault	1,Check whether the resistance of sensor is normal, otherwise replace it. 2,Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3,When the 1 and 2 are both normal, then the component or integrated circuit is damaged, the electric control board should
F3	The indoor coil emperature sensor fault	1,Check whether the resistance of sensor is normal, otherwise replace it. 2,Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3,When the 1 and 2 are both normal, then the component or integrated circuit is damaged, the electric control board should be replaced.
F4	Indoor motor fault	1,Check whether the contact of the plug of the motor wire and socket is well.Please make sure it is well contacted. 2,Check whether the indoor motor has damaged, the motor should be replaced when it is damaged. 3,Check whether the controllable silicon and other components on the electric control board have damaged, replace the controllable silicon or electric control board when they are damaged. 4,Check whether the indoor fan is unobstructed when running, please fix the indoor fan again when it is obstructed.

The malfunction code	*The malfunction content*	*The reason of fault and solution*
F6	The outdoor sensor fault	1,Check whether the resistance of sensor is normal, otherwise replace it. 2,Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3,When the 1 and 2 are both normal, then the component or integrated circuit is damaged, the electric control board should be replaced.
FA	The cmmunication fault between the wire controller and the indoor PCB	1,check whether the wire controllers connecting wire is short circuit or loose, please make it connect well. 2,Check the connecting line,wire controller PCB whether they are loose or have a bad contact. Please make them have a good contact.
FC	outdoor unit driving fault, starting compressor failure	1,Turn on the power again, and then check whether the operation of the compressor is normal. 2,Check whether the connection of the compressor is correct or reliable, otherwise repair it. 3,Check whether the components on the electric control board have been damaged, if they are damaged, the components or the electric control board should be replaced. 4,Check whether the connecting wires are disentwined between the Intelligent Power Module board and the main board, otherwise make the wires connect firmly .
FF	The outdoor DC motor fault	1,Check the resistance value of the DC motor port. If it is short circuit, please change the DC motor. 2,Check the voltage value of the DC motor port VCC(15Vdc) Vdm(340Vdc),please change the PCB board if the voltage values are abnormal. 3,if all the voltage values of the DC motor port are normal*the Vsp voltage 0~5v is also ok it shows that the inner PCB board of the DC motor is damaged, then change the DC motor.
dF	Defrosting state	The unit is in defrosting state,that is normal.
dl	Mode conflict	When the running mode for No.1 indoor unit is different from No.2 indoor unit, the dF is displayed.

The malfunction code	*The malfunction content*	*The reason of fault and solution*
P2	The outdoor unit inverter module protection fault	1,Check whether the connection of the compressor is reliable, otherwise connect firmly again. 2,Check whether the fixation between the IPM module and the radiator is firm. 3,Check whether the compressor is well, otherwise replace it. 4,Check whether the IPM module is abnormal, otherwise replace it.
P3	Over current of outdoor unit	1,Check whether the ambient temperature exceeds the operation range for the air conditioner. 2,Check whether the current detection circuit is abnormal, the electric control should be replaced when it is abnormal.
P4	The Ddischarge emperature of compressor is too high, the outside ambient emperature over-temperature, switch off the compress or shell temperature,module temperature over-temperature	1,Check whether the pressure is normal when the unit is running, if it is abnormal, you should detect the leakage and then welding and adding refrigerant. 2,Check whether the ambient emperature is too high or too low, when the emperature is more than -20 degrees and less 55 degrees, it can disappear automatically. 3,Check whether emperature switch of compressor is damage, it should be replaced if it is damaged.
P7	The outdoor unit DC generatrix voltage is abnormal	1,Check whether the supply voltage is out of ranging from 150 to 270V. 2,Check the voltage detection circuit of the IPM base board is abnormal, if it is abnormal, the IPM base board or the electric control board should be replaced.
P8	Lack refrigerant or reverse valve fault	1,Check whether the high and low pressure valves have been opened, otherwise open the valves. 2,Check whether the indoor coil pipe temperature sensor is normal, if it is abnormal, the sensor should be replaced. 3,Check whether the indoor coil emperature sensor hung in the air,please plug it in a correct position if the indoor coil emperature sensor hung in the air. 4,Check the system pressure is abnormal, if it is abnormal, yon should detect leakage and the welding and adding the refrigerant. 5,Please change the outdoor PCB board , if all above analysises are normal.

failure code manual

DC inverter single split series

LED	running lamp (flicker times)	timer lamp (flicker times)	failure	The reason of fault and solution
F1	1	Light	communication fault	1、Check whether the connection of the outdoor unit and indoor unit is one to one, otherwise connect the L, N and communication line of the indoor unit and outdoor unit one to one. 2、Measure whether the voltage between the zero line and the communication line is 18V-30AC half-wave signal, check whether the communication circuit on the indoor and outdoor electric control board has been damaged, otherwise replace it. 3、Check whether the LED on the outdoor power board has been on, otherwise replace the electric control board. 4、Check whether the unit is abnormal caused by the external interference, if it is, then find the interfering source, and removes it.
F2	2	Light	ambient temp. sensor fault	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
F3	3	Light	coil pipe temp. sensor of indoor unit fault (inlet, Middle, outlet)	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
F4	4	Light	fan motor of indoor unit fault	1、Check whether the contact of the plug of the motor wire and socket is well, making sure well contact. 2、Check whether the indoor motor has damaged, the motor should be replaced when it is damaged. 3、Check whether the controllable silicon and other components on the electric control board have damaged, replace the controllable silicon or electric control board when they are damaged.

F5	5	Light	module of outdoor unit fault	1、Check whether the connection of the compressor is reliable, otherwise connect firmly again. 2、Check whether the fixation between the IPM module and the radiator is firm. 3、Check if the compressor is well, otherwise replace it. 4、Check whether the IPM module is abnormal, otherwise replace it.
F6	6	Light	ambient temp. sensor of outdoor fault	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
F7	7	Light	coil pipe temp. sensor of outdoor unit fault	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
F8	8	Light	suction temp. sensor of compressor fault	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
F9	9	Light	discharge temp. sensor of compressor fault	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.

FA	10	Light	inductor of current or voltage fault	Check whether inductor of current or voltage have been damaged, they should be replaced if they are fault.
FC	11	Light	compressor drive fault	1、Power on again, and check the operation of the compressor is normal. 2、Check whether the connection of the compressor is reliable, otherwise repair. 3、Check whether the components on the electric control board have been damaged, if they are damaged, the components or the electric control board should be replaced.
FD	12	Light	phase lacking or phase sequence fault	Check power wire voltage or change two power wires.
FE	13	Light	gas return sensor fault(include A, B, C, D)	1、Check whether the resistance of sensor is normal, otherwise replace it. 2、Check whether the sensor wire is short circuit or open circuit, and whether the plug is well contacted, whether there is welding off or rosin joint on the electric control board, repair it if there is any above. 3、When the 1 and 2 are both normal, then the components or integrated circuit is damaged, the electric control board should be replaced.
FF	14	Light	other fault	1、DC motor fault 2、NO refrigerant 3、Other fault
P1	1	Light	temp. of evaporator protection	1、Check whether the filter of indoor unit is too dirty, and it should be cleaned when it is too dirty. 2、Check whether it has barrier around indoor unit, it should be remove if it has. 3、Check whether the indoor motor is damaged, it should be replaced motor or electrical control board when it is damaged.
P2	2	Light	overheat, over current protection of inverter module	1、Check whether the fixation between the IPM module and the radiator is firm. 2、Check whether the compressor is well, otherwise replace it. 3、Check whether the IPM module is abnormal, otherwise replace it.
P3	3	Light	over current protection	1、Check whether the ambient temperature exceeds the operation range for the air conditioner 2、Check whether the current detection circuit is abnormal, the electric control should be replaced when it is abnormal.

P4	4	Light	discharge temp. of compressor protection	1、Check whether the air condition system and pressure are normal. 2、Check whether the sensor, connecting wire of the sensor and the detection circuit are abnormal.
P5	5	Light	over heat of compressor top protection	1、Check whether the air condition system and pressure are normal. 2、Check whether the sensor, connecting wire of the sensor and the detection circuit are abnormal.
P6	6	Light	suction temp. of compressor protection	Check whether the air condition system and pressure 1、are normal. 2、Check whether the sensor, connecting wire of the sensor and the detection circuit are abnormal.
P7	7	Light	low or high voltage protection	1、Check whether the supply voltage is out of rang from 150 to 270V 2、Check the voltage detection circuit of the IPM base board is abnormal, if it is abnormal, the IPM base board or the electric control board should be replaced.
P8	8	Light	low presser of gas return protection	1、Check whether the pressure is normal when the unit is running, if it is abnormal, should detect the leakage and welding、 add refrigerant.
P9	9	Light	high pressure of discharge protection	1、Check whether the pressure is normal when the unit is running, if it is abnormal, should detect the leakage and welding、 add refrigerant.
PA	10	Light	high temp. of condenser protection	1、Check whether the condenser of outdoor unit is too dirty, and it should be cleaned when it is too dirty. 2、Check whether it is running at bad condition long time. 3、Check whether senor and wire are normal.
PC	11	Light	high temp. of outdoor ambient protection	1、Check the outdoor ambient temperature is too high or there is heat source around the outdoor unit. 2、Check whether the sensor and sensor wire are normal.
PF	12	Light	other protection	

【Quick connector installation instruction 】

This sheet only guides the requirements of the installation for stainless quick connector pipe.Other installation requirements please refer to the installation guide along with the unit.

- To expand the connecting pipe,please hold one side then expand it following the right direction.
- Please insure the angles have a radian at some extent while intalling the stainless soft pipe. Angels need to be around, not bended.(to the quick connecting spot and drilled point of wall.
- Please fix the stainless soft pipe while installing because the connecting pipes are soft, so that prevent them from getting bended or stretched.
- The minimum bending radius are as follows:

Stainless soft pipe	*Model*	*Minimum bending radius(mm)*
Φ *Eight*	Twenty-one,Twenty-five	Eighty(mm)
Φ *Ten*	Thirty-five	One hundred(mm)
Φ *Thirteen*	fifty-one	One hundred and fifteen(mm)

【Installation Guide】

To keep the allowed bending radius,please make the packed soft pipes vertical for expanding.			Please do not expand only one side of the packed soft pipes.
Please make use of semicircle pulley to keep the allowed bending radius.			Extremely bending could damage the pipes.
Please use twisting wheel to avoid improper bending.			Over length soft pipes will lead to irregular bending.
Please use rigid elbow to keep the bending radius while soft pipes operating.			Undersize bending will damage the soft pipe.
Please Keep the minimum bending radius while installing.			Short soft pipes will have them bending undersize,it's not allowed.